

**INSTALLATION INSTRUCTIONS
FOR
ARJENT™ SUNSCREEN KIT**

SAFETY MESSAGE TO INSTALLERS

⚠ WARNING

The lives of people depend on your proper installation and servicing of Federal products. It is important to read and follow all instructions shipped with the products. In addition, listed below are some other important safety instructions and precautions you should follow:

- To properly install this kit: you must have a good understanding of automotive electrical procedures and systems, along with proficiency in the installation and service of safety warning equipment. Always refer to the vehicle's service manuals when performing equipment installations on a vehicle.
- After installation, test the light system to ensure that it is operating properly.
- File these instructions in a safe place and refer to them when maintaining and/or reinstalling the product.

Failure to follow all safety precautions and instructions may result in property damage, serious injury, or death to you or others.

A. GENERAL.

Model number XCSCRNK is a sunscreen kit intended for use with the Federal Signal Arjent lightbars.

B. UNPACKING.


After unpacking the kit inspect it for damage that may have occurred in transit. If the kit has been damaged, do not attempt to install it. File a claim immediately with the carrier, stating the extent of damage. Carefully check all envelopes, shipping labels and tags before removing or destroying them. Ensure that all parts in the KIT CONTENTS LIST have been included.

C. KIT CONTENTS LIST.

Qty	Description	Part No.
16	Screw, HI-LO #10 x 3/8"	7017A034-06
1	Sunscreen, Center	8583296
2	Sunscreen, End	8583297

D. INSTALLATION.

Remove the top domes. See figure 1. Secure the sunscreen to the black plastic trays as shown using the supplied screws. Replace the domes.

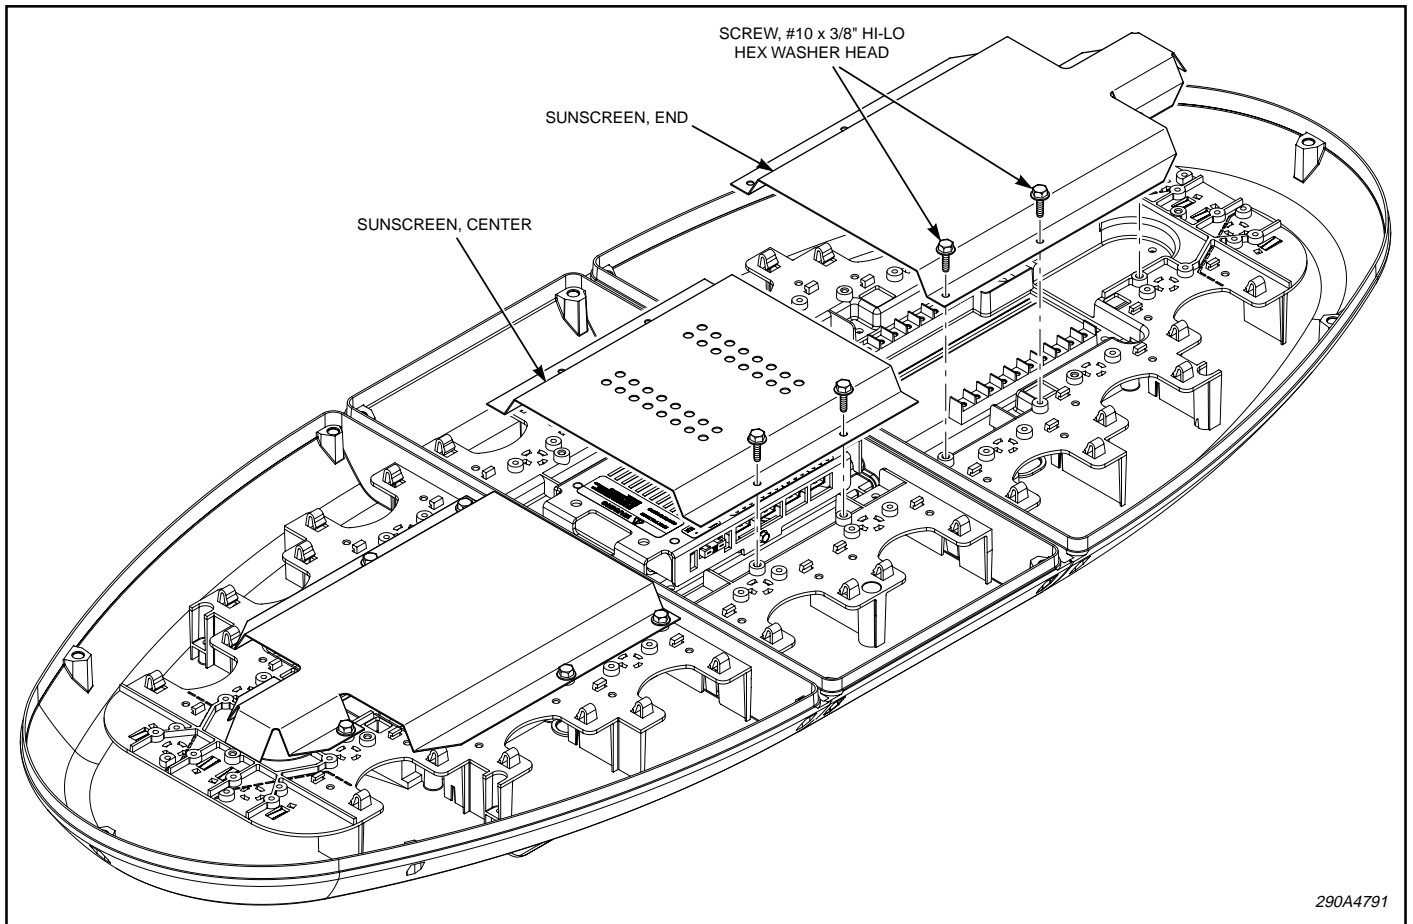

290A4791

Figure 1.